

Continue



Flynova pro user manual

Das Flynova Pro ist ein fliegendes Spielzeug, das mit drei farbigen Lichtern ausgestattet ist und einfach zu steuern ist. Es kann auf verschiedene Arten verwendet werden, wie zum Beispiel durch Wurfbewegungen oder mit einem Magic-Wand-Accessory. Das Material des Flynova Pro ist weich und leicht, was bedeutet, dass es völlig sicher ist, mit den Händen zu greifen. Das Spielzeug ist für den Innen- und Außenbereich geeignet und kann von Kindern, Jugendlichen, Erwachsenen sowie älteren Menschen verwendet werden. Die Ladung des Flynova Pro dauert nur 25 Minuten, was bedeutet, dass Sie immer bereit sind, loszulegen. Mit dem Magic-Wand-Accessory können Sie das Flynova Pro auf eine neue Ebene bringen und es mit verschiedenen Tricks und Moves steuern. Das Spielzeug kann bis zu 49 Fuß in die Luft steigen und wird durch den Magnetismus des Magic-Wands wieder zurückgezogen. The Flynova Pro, a reimagined globe-shaped toy with a powerful motor, is designed for mind-blowing tricks and stunts. Its unique shape and motor make it suitable for both beginners and experienced users, who can create their own challenging maneuvers. The magic controller adds an extra layer of fun to the experience. The Flynova Pro is compact, easy to control, and safe for use in various settings, including homes and public parks. It features a grab-to-stop function, ensuring safe play with children. The toy's durability has been extensively tested, and it can withstand bumps and scrapes without falling apart. The aerodynamic design provides a smooth flight experience when performing tricks. With triple the battery life of its predecessor, the Flynova Pro offers extended flying time, making it an ideal choice for kids' activities during lockdowns or social distancing measures. Hands are completely safe when launching or catching the Flynova Pro, thanks to our rigorous design testing that ensures it's suitable for kids and adults alike. We've put in extra measures so you can focus on mastering new tricks without worrying about getting hurt, regardless of your age. ****Using Modes****

To turn it on/off: Press the power button on top with your finger - the LED light bar will flash in different colors. * To swing: Move FlyNova Pro with your wrist, and the wind blade starts rotating. Swing again to stop it. * To shut down: Press the power button once more. ****Boomerang**** Hold FlyNova Pro horizontally or vertically, tilt 15-45°, and throw - it'll fly back in its original direction. ****Tips:**** * Tilt angle affects speed; start with small angles and increase as you get better. * Levitate by holding with one hand, releasing, and placing your palm on the bottom (1cm-5cm). ****Fly to the Target**** Hold FlyNova Pro horizontally or vertically, tilt 15-65° downwards, release - it'll fly towards the target. ****Soar & Magnetic Levitation (Requires magic wand)**** * In suspension mode, swing the magic wand once - FlyNova Pro flies up and changes color. * Swing again to continue flying upwards and changing colors. * After stopping the magic wand, FlyNova Pro will slowly descend freely. ****Product Name:** Flynova Pro * **Colors:** Blue / Red / Pink ***

****Battery Type:**** Lithium ion polymer battery ****Main Material:**** PP plastics ****Charging Time:**** About 25 minutes ****Battery Life:**** 8-10 minutes ****Suitable Age:**** Over 6 years old ****Product Weight:**** 27g ****Product Size:**** 95mm/*95mm/*95mm Don't let the FlyNova Pro get wet or overheated. If it does, wait for it to cool down before charging. Avoid sudden impacts and direct sunlight. Charging is recommended with adult supervision. Don't charge in extreme temperatures or near flammable materials. Children under 6 shouldn't play with FlyNova Pro. Before playing, make sure it's fully charged and the top is secure. Outdoors, keep a safe distance from obstacles like rivers, roads, and buildings. Avoid using FlyNova Pro in bad weather like rain, snow, thunderstorms, or strong winds to prevent injury or damage. Don't fly the product near fragile objects like light bulbs or glass. Don't leave it charging unattended for too long. Once charged, disconnect the charger. To protect the battery, turn off the power before charging.