

GT Gas Part #40415 Not legal for sale or use in California on pollution-controlled vehicles. Doc. 40415-99 v1.6 CONTENTS Updating the GT18- 25 Overview18 Basic Steps to Update (Short19 Updating your GT (Detailed Steps for Windows)24 Updating Your GT (Detailed Steps for Apple/Mac)25 40415 GT GAS About the GT ..19 What You Need to Update the GT20-23 Troubleshooting Updating Problems . ----2-17 Preview of Basic Installation Steps2 Tuning Information3 Parts List 4 Parts Description . 2 Vehicle Applications8 Available Options - All Models9 Install Download7 The Main Screen..... ...9-17 Change Vehicle9-11 User Options9 Gauge Setup12 Reset Average Economy12 Performance Testing ..13-15 Vehicle Settings12 Driving Coach Setup . .16 Special Functions16 Diagnostics ..17 Show Settings17 Uninstall GT17 Update GT Software.17 Physical Installation 26-29 ...29 Installing the Tune ... Brief Preview ..30-32 How to Install the Tune33 Troubleshooting Installation Problems35 When to Return to Stock .35-37 What does this mean? Steps ..35 How to Return to Stock35 What if I Don't Return to Stock?37 More Information . . 37 How Do I Know if the GT is (Still) Installed? .39-50 Changing the Power47 USB Mode Level ..39 Reset Fee 39 Windows Update40-46 Contacting Technical Suppor t49-50 Important Warranty Information . . 47 Pyrometer Calibration .. 18 for more information. 2. Physically install the GT. See page 26 for more information. 3. Install the tune to your vehicle in for ANY type of service. There are also other important times to uninstall the tune. Please see page 35 for more information. See pages 4-6 for a complete list and description of the items included with your GT. Tuning Information 40415 GT GAS SETTING PEAK HORSEPOWER PEAK TORQUE OCTANE High Octane up to 35 Up to 40 91+ octane Regular 15-20 15-20 85+ octane Stock Stock Stock OEM Spec. IMPORTANT NOTE: The only gas tunes available are based on the octane of the fuel that you are running. Failure to comply with fuel octane requirements can result in engine damage. If you will need to change the tune installed on your vehicle – see page 39 for more information. 2 VEHICLE APPLICATIONS This vehicle application list is current for GT software version 1.1.4.2 Check the GT product page at www.bullydog.com to check for new applications. 3 40415 GT GAS CHEVROLET/GMC AVALANCHE 5.3L V8 2002-2014 6.0L V8 2002-2014 6 2007-2014 CHRYSLER 300C 5.7L V8 HEMI 2006-2010 6.1L V8 HEMI 2006-201 2010 DA KOTA 4.7L V8 2008-2010 DURANGO 4.7L V8 2008-2009 5.7L V8 HEMI 2006-2008 6.1L V8 HEMI 2006-2008 6.1L V8 HEMI 2006-2008 6.1L V8 HEMI 2003-2010 FORD E-SERIES 150-350 4.6L V8 2005-2008 5.4L V8 2005-2008 6.8L V10 2005-2008 EXCURSION 5.4L V8 2005-2005 6.8L V10 2005-2005 EXPEDITION 5.4L V8 2005-2010 EXPLORER 4.6L V8 2005-2010 F-150 3.5L ECO BOOST 2011-2013 5.4L V8 2005-2010 6.2L V8 2011-2013 F-250-550 5.4L V8 2005-2010 6.2L V8 2011-2013 6.8L V10 2005-2010 MUSTANG 4.0L V6 2005-2010 4.6L V8 2005-2010 4.6L V8 2005-2010 6.2L V8 2011-2013 5.4L V8 2005-2010 6.2L V8 2011-2013 5.4L V8 2005-2010 6.2L V8 2011-2013 6.8L V10 2005-2010 6.2L V8 2011-2013 6.8L V10 2005-2010 F-150 3.5L ECO BOOST 2011-2013 5.4L V8 2005-2010 6.2L V8 2011-2013 F-250-550 5.4L V8 2005-2010 6.2L V8 2011-2013 6.8L V10 2005-2010 MUSTANG 4.0L V6 2005-2010 4.6L V8 2005-2010 6.2L V8 2011-2013 F-250-550 5.4L V8 2005-2010 6.2L V8 2011-2013 6.8L V10 2005-2010 MUSTANG 4.0L V6 2005-2010 4.6L V8 2005-2010 6.2L V8 2011-2013 F-250-550 5.4L V8 2005-2010 6.2L V8 2011-2013 6.8L V10 2005-2010 MUSTANG 4.0L V6 2005-2010 4.6L V8 2005-2010 6.2L V8 2011-2013 F-250-550 5.4L V8 2005-2010 6.2L V8 2011-2013 6.8L V10 2005-2010 MUSTANG 4.0L V8 2005-2010 4.6L V8 2005-2010 6.2L V8 2011-2013 6.8L V10 2005-2010 6.2L V8 2011-2013 6.8L V10 2005-2010 MUSTANG 4.0L V8 2005-2010 4.6L V8 2005-2010 6.2L V8 2011-2013 6.8L V10 2005-2010 6.2L V8 2011-2013 6.8L V10 2005-2010 MUSTANG 4.0L V8 2005-2010 4.6L V8 2005-2010 6.2L V8 2011-2013 6.8L V10 2005-2010 MUSTANG 4.0L V8 2005-2010 4.6L V8 2005-2010 6.2L V8 2011-2013 6.8L V10 2005-2010 MUSTANG 4.0L V8 2005-2010 4.6L V8 2005-2010 6.2L V8 2005-2010 4.6L V8 2005-2010 4.6L V8 2005-2010 6.2L V8 2005-2010 2010 RAPTOR 6.2L V8 2010-2013 INFINITI EX 35 / EX 37 3.5L V6 2008-2012 3.7L V6 2012-2014 FX 35 / FX 45 / FX 37 3.5L V6 2005-2012 3.7L V6 2012-2014 FX 35 / FX 45 / FX 37 3.5L V6 2005-2019 3.7L V6 2012-2014 FX 35 / FX 45 / FX 37 3.5L V6 2005-2019 3.7L V6 2012-2014 FX 35 / FX 45 / 2014 QX 56 5.6L V8 2005-2014 JEEP COMMANDER 4.7L V8 2008-2009 5.7L V8 HEMI 2006-2010 GRAND CHEROKEE 4.7L V8 2008-2009 5.7L V8 HEMI 2006-2010 GRAND CHEROKEE 4.7L V8 2008-2009 5.7L V8 HEMI 2006-2010 GRAND CHEROKEE 4.7L V8 2008-2009 5.7L V8 HEMI 2006-2010 GRAND CHEROKEE 4.7L V8 2008-2010 GRAND CHERO I4 2005-2014 3.5L V6 2005-2014 ARMADA 5.6L V8 2005-2014 CUBE 1.6L I4 2009-2011 1.8L I4 2009-2011 1.8L I4 2009-2014 FRONTIER 2.5L I4 2005-2014 MURANO 3.5L V6 2005-2014 NV2500/3500 4.0L V6 2012-2014 5.6L V8 2012-2014 5.6L V8 2012-2014 4.0L V6 2012-2014 4.0L V6 2005-2014 4.0L V6 2008-2014 QUEST 3.5L V6 2005-2014 ROGUE 2.5L I4 2008-2014 SENTRA 2.0L I4 2007-2014 2.5L I4 2007-2014 2.5L I4 2007-2014 2.5L I4 2007-2014 VERSA 1.6L I4 2007-2014 VERSA Number: 40400-105 3. HDMI Cable Part Number: 40400-100 5. Fuse Tap 6. Fuse Spade 7. Micro SD Card Part Number: 40400-101 8. Windshield Mount Part Number: 40400-102 4. Mini USB Part Number: 40400-103 You may also want to have the items listed below available when you are installing the GT: Tools Needed • Fuse Puller • Voltage Meter (optional) • Alternative Mounting Solution (See page 29 for more information.) Extra Parts (Optional) • Battery Charger 4 40415 GT GAS PARTS DESCRIPTION The GT Head Unit The main component of the Gauge Tuner is the head unit. It has the screen and the buttons that allow you to access all of the functions and features of the tuner. GT Front Side: The GT has seven capacitive touch is a button style that is sensitive to the presence of your nger. Capacitive touch buttons. Capacitive touch is a button style that is sensitive to the presence of your nger. GT Back Side: 1. T-Slot Mount Socket, which allows you to use the GT with dierent mounting options. 2. HDMI port 3. Micro SD card port 4.3 5.1 2 PARTS DESCRIPTION The OBDII Adapter Plug The GT assembly connects to your vehicle through the diagnostic port, which is located under the dash on the driver's side. The OBDII Adapter Plug connects to the diagnostic port on your vehicle and has a connection for the HDMI cable that plugs into the back of the GT Head Unit. The illustration about the other parts of this important piece of the GT assembly. 40415 GT GAS 1. OBDII Male End: Connects to the vehicle diagnostic port. 2. Power Wire Port: Connects the GT to the power surges. 4. Power Switch: Changes the active power source of the GT. The two options are: 1) KEY: this pulls energy from the fuse box through the power wire and allows the GT to automatically turn on and o based on the vehicle's ignition key position; and 2) BATT: This provides continuous battery power to the GT directly through the vehicle's diagnostic port. 5. HDMI Port: Connects the OBDII adapter plug to the GT the automatically turn on and o based on the vehicle's diagnostic port. 5. HDMI Port: Connects the OBDII adapter plug to the GT the automatically turn on and o based on the vehicle's diagnostic port. 5. HDMI Port: Connects the OBDII adapter plug to the GT the automatically turn on and o based on the vehicle's diagnostic port. Connects the GT to optional sensors including pyrometers or the Bully Dog Sensor Docking Station. 7. Future Peripherals: Not currently in use - may be used to connect additional devices in the future 6 40415 GT GAS BUTTON NAVIGATION FUNCTION 1: Press the top left button to enter the Main Menu, also use this button to exit menus. Menu RPM rpm 00 Coolant Intake Economy mpg 0.0 FUNCTION 2: Press any of the four buttons on the left side of the GT adjacent to one of the vehicle parameters on the screen will display that parameters o when GT is in a menu screen. FUNCTION 3: Continuously hold any of the four buttons to change the Large Gauge style, there are four dierent styles that pop up. NOTE: The GT buttons are Capacitive Touch. This means that a light touch is all that is needed to choose different options. You do not need to push hard or get the buttons to move down or in for the GT to work for you. 7 THE MAIN SCREEN This picture of the GT main screen has the Driving Coach selected for the Large Gauge option. You can change which gauge is featured in the upper right corner of the main screen by holding down one of the buttons on the left side of the GT until the gauge type that you want is shown. Menu button: Press to enter the Main Menu. 40415 GT GAS Menu RPM Wasted Energy rpm 00 Coolant Average MPG Intake Economy Instant MPG mpg 0.0 Vehicle parameters: To change which vehicle parameters: To change which vehicle parameters: To change which vehicle parameters and the large gauge area, simply press one of the four buttons next the preferred vehicle parameters. about changing the information shown on the Main Screen. Instant Economy Gallons Grade Trip MPG Trip Grade ® Acc.Acc. B17011.8 Large Gauge area Dec. Acc. B17011.8 Large Gauge MODELS These options are presented in the order they appear on the Main Menu. If options are missing in your GT. See pages 18-25 for more information on updating your GT. See pages 18-25 for more information on updating your GT. Change Vehicle This option allows you to choose the type of vehicle that the GT will be used with. If the tune has already been installed, (basically uninstall the tune) or change certain settings that can only be changed by writing a new tune to the ECM. Pages 16 and 35-37 have more information about the download options and returning to stock. Gauge Setup This option will allow you to change which gauges are being displayed on the main gauge screen. Denitions for each type of gauge option available are listed on the next page. Changing the Information on the General Display 1. Choose Gauge 4 3. Use the buttons on the right side of the GT to scroll through the dierent functions and highlight the one you want shown on the General Display. 4. When you are done, use the top left button to go back to the Main Menu and General Display. 4. When you are done, use the top left button to go back to the Main Menu and General Display. 4. When you are done, use the top left button to go back to the Main Menu and General Display. control of Bully Dog; however, Bully Dog offers a range of add-on automotive sensors and sensor interface equipment. Contact Bully Dog or a Bully Dog or a Bully Dog or a Bully Dog dealer to learn more. GAUGE SETUP Gauge 1 Use the Up & Down Arrows to Change the Tranny Tune Pyro 2 Speed Boost ® 9 Gauge Setup (continued) 40415 GT GAS Pyro 1 & 2 Both pyro 1 and pyro 2 measure exhaust gas temperature. The only dierence between them is the location of the temperature sensor. Used for defuel level settings, which protect the engine from heat damage. Availability and location of factory installed pyrometers vary according to vehicle make and year. All '07.5 and newer diesel pickups that are equipped with OEM diesel particulate lters also include factory OEM sensors. For all other vehicles, pyrometer sensors. For all other vehicles, pyrometers which will work with the GT. Speed This option shows the current vehicle speed. Monitoring this information can help you ensure that the speed displayed on the GT and the vehicle speedometer match the actual vehicle speed. Other important numbers, like the odometer and fuel eciency, are based on this information. RPM This option shows the number of revolutions per minute of the engine. This will help you protect your vehicle and improve performance by watching and ensuring that the RPMs stay within a certain range. Coolant Temperature This option shows the coolant temperature. Used in defuel settings to prevent damage to the engine. Not available on all vehicles. Throttle Position This option shows the throttle position the coolant temperature. indicate where changes can be made to driving habits to maximize fuel eciency. Intake Temperature and engine performance, and increase horse power. The Gauge Tuner (GT) is designed to work with the RFI to get the most out of your engine. Load This option shows a real-time reading of the timing position as the truck is running. MAF This option displays information from the Mass Airow Sensor. Used by the Engine Control Module (ECM) to determine how much air is going into the engine. The ECM then sends the correct amount of fuel for optimum engine performance. Fuel Econ. This option displays a real-time measurement of the vehicle's fuel economy, shown in miles per gallon. Determine when your fuel eciency peaks or dies to improve your driving habits and your bottom line when visiting the pump. Fuel Flow This option displays the amount of fuel being used at any given time; it is shown as a percentage. Not available on all vehicles. Boost Current turbo boost pressure. Barometer Current atmospheric pressure. Injection Pulse Width (IPW) The time the injector stays open for each injection event; usually displayed in milliseconds (ms). Battery Voltage This option shows the current battery voltage. Additional features listed on the next page. Transmission temperature. Used in defuel settings to prevent damage to the transmission. Not available on all vehicles. 10 Gauge Setup (continued) The following gauge options are provided to allow the GT to monitor additional sensors that are only available with the Bully Dog Sensor Docking Station. 40415 GT GAS A/F Ratio 1 & 2 This gauge option shows the ratio of air to fuel. The GT will use this information to ensure that your engine is using the correct ratio to completely burn all of the fuel being used and maximize performance and eciency. Only available on Bully Dog Sensor Docking Station part number 40385. AUX 1, 2 & 3 This gauge option shows the information returned to the Sensor Docking Station by an optional temperature sensor. The port for this sensor is marked as 5V out. Frequency This gauge option shows the information from a pulsing type of sensor, like an on-board speed sensor or another optional sensor that operates on the 0-5kHz 5V pulse range. The port on the Bully Dog Sensor Docking Station for this gauge option is marked as FN. 11 User Options 40415 GT GAS Set Background Theme Change the display colors on your GT. Adjust Backlight Change between night and day mode, hold both the right buttons (the up and down buttons) while you are in the general gauge display. Set Animation Preferences Turn the Wave Eect on or o. This eect creates a ripple on the screen whenever you press a button. English/Metric Units Switch between miles/kilometers and gallons/liters. Reset to Default change the user preferences back to the original Bully Dog default settings. This option does not change other GT features to default settings. Reset Average Economy This option resets the saved values on the GT for average fuel economy, the number of gallons used, and the fuel eciency grade displayed by the Driving Coach. Performance Testing This feature oers drag racers the ability to complete the 1/4 Mile and 0-100 KPH performance tests. You can also download saved tests from your GT to your computer and analyze it using the Bully Dog Performance Testing Software. The software is available by free download from www.bullydog.com. See page 43 for more information about the Performance Testing Software. should only be used on a sanctioned 1/4 mile drag racing track. There are two dierent styles available for both tests. The GT will show dierent test screens based on the style of test that is currently selected in the Performance Testing Setup Menu. Speed Sensitive Performance Test Once this test is begun, the GT will show instructions to the user to rst bring the vehicle to a stop. Once the vehicle is at zero miles per hour, the test is ready. The test will automatically start once the vehicle begins to move. Race Tree Style performance test it is important that the vehicle begins to move. a classic race tree on the screen. As soon as the lights on the tree turn green, the GT will begin to record the vehicle's time. In this style of test, the GT will begin to record the vehicle's time. In this style of test, the GT will not wait for the vehicle to start moving before it starts recording performance data. 1/4 Mile Performance data. 1/4 Mile Performance data. - View Test Results View the results for the last performance test that was run. - Save Previous Test to SD Card Save the results of the SD Card can be transferred to your computer using our Performance Testing Analysis Software. For more information on our Performance Testing Analysis software, see page 41 or visit our website: www.bullydog.com - Fastest Times View the results for the quickest 1/4 mile ever recorded. 0-100 KPH Test. This option will test the vehicle's performance until the vehicle has reached a speed of 100 kilometers per hour, which is about the same speed as 62 miles per hour. 12 Driving Coach Setup The Driving Coach is a special feature designed to be your fuel economy dashboard and information center. It provides real-time visual and audio feedback about driving eciency and where energy is being lost. The driving you the power to maximize your vehicle's fuel economy. Two hidden bonuses of driving more eciently are: saving money on fuel and helping the environment! Before the Driving Coach can give you accurate information, it is important to make sure that the GT is showing the correct speed. In the sections below, you will nd specic instructions for using the Driving Coach to become the best driver you can be. 40415 GT GAS Set Economy goal this option will allow you to select a fuel economy goal. The Driving grade. It is very important to select an economy goal that is realistic for both your vehicle and the kind of driving you will be doing. If you will be driving mainly in the city or on the highway, choose a goal that is very close to the advertised fuel eciency for your vehicle in that type of environment. If you will be doing a mixture, choose an economy goal between the advertised fuel eciency for your vehicle in that type of environment. If you will be doing a mixture, choose an economy goal between the advertised fuel eciency for your vehicle in that type of environment. for the average fuel economy, the number of gallons used, and the grade in the Driving Coach. Adjust Acceleration This option will allow you to select the GT sensitivity for the acceleration and deceleration in the Driving Coach. Coach Sound Setup This option will allow you to turn the Driving Coach sounds on or o. Showing/Hiding the Driving coach is always running, even if you choose not to have the information displayed. You can show or hide the driving coach is always running, even if you choose not to have the information displayed. Setup (continued) Checking Speedometer Accuracy First: Change the Gauge Setup to have the Speed displayed on the main display screen. Next: Go to a safe place with little to no trac where you can perform a speed test. Make sure the speed limit is at least 60 mph. Here are two dierent ways to nd out your vehicle's actual speed: Method 1: GPS 1. Use a GPS device to compare your actual speed and the speed displayed on the Bully Dog. 2. Calculate the Percent Difference by using this formula: 40415 GT GAS Percent dierence = Example 1: A GPS device reads 65 mph and the GT reads 62 mph for one single moment. Step 1. Percent dierence = Step 2. Percent dierence = Step 3. Percent dierence = .046 or 4.6% then round up 5% GT speed 62 - 65 65 - 3 65 Method 2: Stopwatch 1. Use a Stop Watch to measure how long it takes to travel one mile while traveling at 60 mph according to the GT. Accelerate up to a speed accurately reading your vehicle speed. If it takes 2 seconds more or less than 60 seconds to travel one mile, then use the formula to the right to calculate the Percent Dierence. Once you have calculate the percent dierence use this formula: Percent dierence = Example 1: Using a stop watch the actual time it took to drive one mile while traveling at 60 mph according to the GT was 63 seconds 63 - 60 60 3 60 .05 or 5.0% Adjusting the Speed Display 1. Use one of the methods described in the previous section to determine the exact percentage dierence between the GT and your actual speed. 2. Choose the opposite percentage in the Adjust Speed Display menu. For example, if the dierence between your actual speed. 2. Choose the opposite percentage in the Driving Coach Setup (continued) Checking Average Fuel Economy It is important to check the accuracy of the average economy readout on the GT at least once every changing season. There are many reasons to check and adjust the average of 1.3% less energy than the fuel delivered in warmer seasons. That means that the same amount of liquid is going into the tank, but it is 1.3% less energy than the fuel economy of the GT cannot sense or adjust for. That is why it is important to adjust the fuel economy of the GT every once in a while. 40415 GT GAS To adjust the Average Fuel Economy displayed by the GT, follow these steps: 1. Go to the gas station and get a full tank of gas. 2. Reset both of the following gauges before driving away from the gas station: - The trip odometer on your GT. - The trip odometer odom trip odom tank (or two) 5. Calculate your vehicle's average fuel economy by hand using the following equation: • NOTE: If the speedometer on the vehicle is not accurate, then the odometer will also be incorrect. You will need to be able to calculate the Percent Difference between the average fuel economy that is displayed by your GT. Adjust the Average fuel economy that is displayed by your GT. Adjust the Average fuel economy that is displayed by the GT: 1. Go to the Main Menu 2. Choose Vehicle Setup 3. Choose Adjust Economy Display 4. Use the buttons on the right to move up and down the percentages 5. Choose a percent value that is the opposite sign of the Percent Difference is 14%, you should choose -14%. 15 Vehicle Settings Set Engine Size This is automatically determined when you choose your vehicle make and year during installation of the tune. You would only need to access this option if you do not have a stock engine displacement size. Set Vehicle Weight This is automatically determined when you choose your vehicle make and year during installation of the tune. not have a stock gross vehicle weight. Select Pyro Source Choose either factory pyrometers. (Only available on 07.5 and newer vehicles that come equipped with a factory pyrometer) Set Warning Levels Set the temperature level at which the GT will provide a warning to help you protect your engine from heat damage. It is also possible to turn each of these settings completely o. This is appropriate if the sensor for that setting is not available or if you do not wish to have that setting monitored by the GT. See the Pyrometer Calibration sec tion on page 48 for help in determining warning temperatures. 40415 Engine Coolant Temp Level Boost Level Turn this setting o or add a Bully Dog boost sensor if your vehicle does not have a factory transmission temperature sensor. Adjust Economy Display Change the miles per gallon shown by the GT. This setting should be changed if the GT is showing incorrect fuel mileage. See page 15 for more information about how to do this. Adjust Speed Display Change the vehicle speed shown by the GT. This setting should be changed if the GT is showing an incorrect fuel mileage. Startup Coolant Temp Level This option was included to ensure that the vehicle is warmed up properly before the GT tuning options that provide additional power are available for all vehicles. You can check out which features are available for your model car by visiting the Bully Dog website and downloading the GT Gas Vehicle Feature Matrix. For definitions, check out the Glossary. These options cannot be adjusted On the Fly (OTF). This means that they are set when you install the tune. The only way to change these settings is to start the Install Download process and choose Change Settings when you are prompted by the GT. 16 40415 GT GAS Diagnostics This option reads the Diagnostic Trouble Codes (DTCs) from your vehicle engine. You can also search for more information about DTC codes online using your favorite search engine. IMPORTANT NOTE Most DTCs indicate a problem with the engine, not with the tune or the tuner itself. If you want to know if a DTC is being caused by the GT or not, uninstall the tune and drive your vehicle for about one week. If the DTC comes back, reinstal the tune and test drive for another week - if the DTC comes back while the tune is reinstalled, contact technical support. See page 65 for more information about contacting technical support. Show Settings screen will show you information about your vehicle, the GT, and your current vehicle settings. This screen will also indicate if the GT tune is currently installed or not installed o listed on pages 30-32. You can nd more information about uninstalling the download on pages 35-37. Update GT Software This option will update the software on the GT itself from the les on the Micro SD card. This is an important nal step to the update process. See pages 18-25 for more information about updating your GT. IMPORTANT WARRANTY INFORMATION Vehicle Warranty You can access information about your vehicle warranty and your rights as an owner to use aftermarket products without voiding the warranty at the following SEMA (Specialty Equipment Market Association) website: GT Warranty A new GT is covered for one year after the date of purchase. This warranty covers repairs for factory defects; it does not cover accidental damage or reset services. See page 39 for more information about GT resets and the required fee. For pricing information about contacting technical support. You can nd more specic warranty information at the following page on the Bully Dog website: 17 UPDATING THE GT OVERVIEW FAQs about Updating Why do I have to update my GT? Because it's very important! These are just some of the reasons: 1. Vehicle manufacturers regularly change the part numbers and other information that the GT needs to know in order to communicate eectively with your engine computer. If the GT doesn't have updated information, it may not work correctly with your vehicle. Bully Dog releases updates when necessary to keep up with any changes that vehicle manufacturers make and give our customers the best support team gathers information. about any problems experienced by customers and works with the engineers to x them as soon as possible. If these xes can help other people avoid similar problems, our engineers include them in the updates that we release for everybody. One of the most important troubleshooting steps we take when someone encounters a problem is to make sure lease for everybody. they have the most recently released software version. This often immediately xes the problem! 3. Bully Dog engineers are constantly working to expand the features and vehicles that the GT is able to support. Once a new vehicle or option is unlocked, they make sure it is available to everyone by including it in the updated software version. Do I have to update my brand new GT? 40415 GT GAS Yes! There is no way to know how long your particular GT may have been waiting on the shelf for you. How often should check for them at least four times a year. A good rule of thumb is to check once every three months. It is also a good idea to update the GT if you have uninstalled the tune for any reason, like taking your vehicle in for service. This will help you avoid any problems during the reinstall if the engine computer has been flashed and has new part numbers and other information from vehicle manufacturers, tested fixes for problems customers may encounter, and any additional features or vehicles that our engineers have unlocked. How can I tell which software version is listed under System Info, next to Version It is labeled SW on software versions up to (and including 1.1.3.9); on software versions 1.1.4.0 and newer, it is labeled Software. How can I use the Update Agent to check for updates? Start the Update Agent application and connect the Micro SD card to your computer using the card reader that came with your GT. If you have an older model of GT and did not receive a card reader, you can purchase one online at www.bullydog.com. There are also many local retailers who carry card readers that are capable of supporting the Bully Dog device, check the current software, and let you know if an update is available. See page 24 if your SD card is not automatically recognized by the Update Agent. 18 40415 GT GAS UPDATING THE GT Basic Steps to Update (Short Version) You can find a more detailed description of this process on page 20. 1. Run the Update Agent. 2. Connect the Micro SD card to your computer. 3. Choose the vehicle application and let the Agent search. 4. Click the Update button. 5. When the Update is nished, put the Micro SD card in the GT. 6. Update the GT from the SD card by choosing Update GT Software on the Main Menu. What You Need to Update the GT 1. A computer with internet access. • Currently, it is most convenient to update if you have a Microsoft Windows computer. • If the only computer that you have access to is an Apple, you can nd information for how to use this type of computer to update on page 25. 2. A way to connect the GT to the computer (with the Micro SD card installed in the GT). Note: Do not try to connect use the HDMI cable or the OBDII adapter plug to update the GT. 19 UPDATING THE GT DETAILED STEPS FOR WINDOWS The following instructions are intended for Microsoft Windows computers. Please see page 25 for Apple computer instructions. Uninstall the tune from your vehicle 1. If the tune is not yet installed, skip to step 2. 2. For information about uninstalling the tune, see pages 35-37. 3. For information about checking to see if the tune is installed, skip to step 2. 2. For information about checking to see ages 35-37. 3. For information about uninstalling the tune, see pages 35-37. 3. For information about checking to see if the tune is installed, skip to step 2. 2. For information about checking to see if the tune is installed, see page 37. Connect the Micro SD card to a computer with internet access 1. Connect the Micro SD card to installed by using a USB cable. Do not use the HDMI cable or the OBDII adapter plug to update the GT. 3. Download and install the Update Agent application. • If it is already installed by checking your Start Menu under All Programs. The Update Agent will be listed under the Bully Dog Technologies folder: 40415 GT GAS Windows XP Windows 7 Note: If you don't have the Update Agent installed see the next page for details on how to download and install it from the internet. Windows Computers. 4. You can download the installation le at • Save the le rst, then run it. (If you try to run the le without saving, your computer will generate an error message). • If you get pop-up messages asking for permission to install, click the buttons to let your computer nish installing the Update Agent. 21 UPDATING THE GT DETAILED STEPS FOR WINDOWS 5. Run the application. • If you have just installed it, the Agent may already be running. - You can show the Update Agent by right-clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and then clicking the icon in the system tray at the bottom right corner of your screen, and the system tray at the bottom right corner of your screen, and the system tray at the bottom right corner of your screen, and the system tray at the bottom right corner of your screen tray at the bottom right corner of your screen tray have already installed the application in the past, it should be listed under Bully Dog Technologies in your computer's list of All Programs. Just double-click the Update Agent icon in that folder to let it start. 6. Let the Update Button and let it write the update to the SD card. 22 40415 GT GAS UPDATING THE GT DETAILED STEPS FOR WINDOWS 8. NOTE: This step varies depending on how you have connected to the computer: - Disconnect it from the computer and put it in the GT. - Then turn the GT on by connecting it to a computer or to a vehicle and turning the key to the Run position. • If you have the GT connected to the computer: - Press the second key from the top on the left side to get out of USB mode. OR - Disconnect the GT from the computer, plug it in to your vehicle, and turn the key to the Run position. 9. Go to the Main Menu on your GT. 10. Go to the bottom of the menu and choose Update GT Software. • If the Update GT Software option is not available on the Main Menu: - Choose Update GT Firmware. OR - Scroll to the top and choose Change Vehicle, then select your vehicle from the list. 11. Conrm that you want to load the le. 12. Let the GT load the le and reboot. Do not disconnect it or turn it o during this part of the process. The GT has now been updated! 23 TROUBLESHOOTING UPDATING PROBLEMS The Update Agent? A. Your computer is not up to date and you need to run Windows Update first. See pages 40-46 for more information about running Windows Update. The Update Agent Won't Recognize my Micro SD card is missing an important file. You can get the file and fix the problem by following these steps: 1. Go to the Bully Dog website. 2. Click on the link for the Update Agent page. 3. Click on the GT Gas card le link. 4. Find the downloaded le on your computer and copy it to your SD card. • The name of the le is GTGIDF.bin 5. Restart the Update Agent application and it should recognize the SD card. 24 40415 GT GAS UPDATING YOUR GT DETAILED STEPS FOR APPLE 1. Return your vehicle to stock. See pages 35-37 for detailed instructions on this process. 2. Connect the Micro SD card to your computer. • Connect the Micro SD card to your computer. card installed by using a USB cable. Do not use the HDMI cable to update the GT. 4. Go to the Bully Dog website and click on the lower right side of the home page • Under Download, in the black toolbar on the upper right side of the home page. 5. At the bottom of the page, under the heading for MACINTOSH USERS ONLY, click the link for GT Gas. This will allow you to download the zipped file labeled GTGFiles.zip file. 8. Copy the contents of the extracted file directly onto your SD card. 9. Install the Micro SD card in your GT unit. 10. Connect your GT unit to your vehicle. 11. Choose the Update GT Software option is not available: - Choose Update GT Software option is not available: - Choose Update GT Software option from the Main Menu. • If the Update GT Software option is not available: - Choose Updat vehicle from the list. 12. Confirm that you want the GT to load the file. 13. Let the GT finish loading the file and rebooting - be sure not to disconnect it or interrupt power in any other way during this part of the process. The GT has now been updated! 25 PHYSICAL INSTALLATION Be sure to check the list and description of included parts on pages 4-6. Brief Preview This is a quick list of the basic installation steps. You can find more specific information about each step in the next section. 1. Connect the GBDII adapter plug. 3. Run the HDMI cable under the dash. 4. Mount and connect the GT. The illustration below shows how to install the power wire if there is no fuse box available inside the cab, there is no need to run the power wire through the firewall into the engine bay. 40415 GT GAS Fuse Box GT & Windshield Mount Fire wall grommet Power Wire OBDII Adapter Plug OBDII Port 26 40415 GT GAS PHYSICAL INSTALLATION Detailed Instructions 1. Connect The OBDII Adapter Plug to the OBDII Adapter Plug. • Find the OBDII adapter plug. • Find the OBDII port in your vehicles, but it is always somewhere under the driver's side dash. The OBDII port will have the same shape as the end of the adapter plug. • Once you have found the port, simply connect the adapter plug. • Once you have found the port, simply connect the adapter plug. one of the following circumstances: You do not want to keep the GT permanently installed and plan on disconnecting it when you are not actively using the unit. You want the GT to remain on at all times, regardless of the eect that this could have on your car battery You prefer physically switching the GT on and o not want it to automatically power down when you turn the key to the o position. OBDII Plug Otherwise, in order for the GT to work as originally designed, it is very important for the power cable to be installed as described below: 1. Locate an ignition fuse. • An ignition fuse is one that is controlled by the position of the key. • Sometimes we call this a "key-on" or "key-on" fuse. • The fuse that controls the front windshield wiper is usually perfect, but any fuse that turns o when the key is turned o will work just ne. • Every vehicle is dierent. There is no way to provide wiring diagrams for all vehicles. You will be able to nd the information for your vehicle in the owner's manual or online. cab. If your vehicle does not have a fuse box under the power cable to the fuse. • You may have received a fuse tap with your GT. See below for an illustration and instructions on using the fuse tap to install the power cable. • You can also simply put the power cable into the fuse box along with the fuse that is normally installed in that location. See the diagram and picture for more information. • If you did not receive a fuse tap, but prefer to use one at your local auto parts store. Be sure to ask for installation instructions if none area one at your local auto parts store. included with the fuse tap. Using the Fuse Tap and Spade 1. Find and pull the fuse that you are going to use to insert the GT Power Cable. 27 2. Slip the fuse tap and crimp them together with pliers. 4. Put the tapped fuse back into the fuse box. PHYSICAL INSTALLATION Detailed Instructions (Continued) 3. Run the HDMI cable under the dash. This step helps you install the HDMI cable in a way that is discreet, stylish, and that helps to protect the GT 1. Plug one end of the cable under the dash on the driver's side so that the end of the cable comes out near the A-pillar. • It may be necessary to temporarily remove the weather stripping and dash panel to successfully hide the HDMI cable under the GT 1. Install the mount that you have chosen. If you are using the Universal Windshield Mount included with the GT, see the installation instructions in the next section. 2. Connect the HDMI cable to the GT. 3. Secure the GT to the mount. Using the Universal Windshield Mount 40415 GT GAS IMPORTANT NOTE: Safety is also your first and most important concern when placing your GT. Make sure the GT does not create blind spots or distract the driver. 1. Locate the T-shaped socket on the GT. 2. Place the square top of the Universal Windshield Mount into the square part of the T-shaped socket on the GT. 3. Slide to the left to secure the GT to the mount. 4. Place the suction cup against the windshield and use the lever to secure the mount to the windshield. You will find information about alternative mounting options on the following pages. 28 40415 GT GAS ADDITIONAL MOUNTING OPTIONS Bully Dog has created alternative mounting solutions which will allow you to mount your GT in even more convenient locations. RAM Mirror-Mate Part Numbers: 31600 and 33600 The RAM Mirror-Mate mounting kit will allow you to mount your GT directly beneath your searches to your GT without blocking the link below: RAM Suction Cup Mounting Kit Part Number: 30600 This kit is the best suction cup mount on the market. The amazing holding power will allow you to mount your GT to be at any time. You can find more information about the RAM Suction Cup Mounting Kit by clicking the link below: Pillar Mount Gauge Pods Bully Dog also offers gauge pods, which will allow you to mount the GT on the pillar of your vehicle. The gauge pods are vehicle specific, so you will need to get the part number that matches your vehicle at for more information. 29 INSTALLING THE TUNE In order to enjoy additional horsepower and other advantages of tuning your vehicle, you need to use the Installing, changing settings, or returning to stock. CAUTION! This option actively reprograms the engine computer in your vehicle - if the process is interrupted because of poor prepa- ration you will have problems which could prevent you from using the GT or even being able to drive your vehicle for a few days. In order to have the best installation experience possible, it is important to review the instructions and pay close attention to the preparation steps listed below: Important Preparation Steps Choosing an Appropriate Time and Place to Install In our for this part of installation. Under optimal circumstances the installation can be completed in less than 30 minutes. If you will need at least an hour to resolve the problem. 40415 GT GAS Do NOT install if the vehicle is in a remote location. DO make sure that you have access to a phone and a computer with internet access. DO update the GT online by using the Update the GT online by u encounter problems during the install. Do NOT install if you do not have a way to contact technical support. DO make sure that you can contact Bully Dog technical support. Technical support is open Monday-Friday, 8 a.m. - 5 p.m., Mountain Standard Time. If you decide to install on Friday evening and encounter problems, you might not be able to use your vehicle until you are able to contact technical support on Monday. See page 47 for more information about contacting technical support. Managing Other Electronics DVD players, etc. Failing to turn o all electronics car prevent a successful download. DO disconnect additional electrical appliances. Remove any chargers or electrical devices connected to: Cigarette lighters, USB ports, or other types of electrical outlets in the vehicle DO disconnect any other aftermarket electronic device. This includes: Trailer brakes, stereo, alarm, CB, remote start, DPF delete, Sirius/XM satellite radio, etc. Any electrical device that was installed after the vehicle was released from the factory. Disconnect these items from the factory. Disconnect these items from the factory. turned off or disconnected as described above during you are installing the GT tune to your vehicle. Once the download is installed, you can reconnect and turn on all of the electronic tuner designed to increase horsepower. 30 INSTALLING THE TUNE Important Preparation Steps (Continued) Make SURE that the Battery is Charged DO make sure that your batteries are fully charged before beginning any download. It is a good idea to have a battery is Charged DO make sure that your vehicle if the batteries are fully charged before beginning any download. IMPORTANT NOTE: It is very important that the tuner is not interrupted while it is writing to your engine computer - if the batteries die and the tune is inter- rupted, it could prevent you from being able to start your vehicle. Make SURE the Tuner is Ready DO complete an online update with the Bully Dog Update Agent. This is a free application available on the Bully Dog website. This requires a computer with internet access. See pages 18-25 for instructions on updating the GT. 2. Choose the Show Settings option. 3. Check what is showing next to Download If the GT shows Installed - Connect the GT to the original vehicle and uninstall the tune. - If this cannot be done, contact technical support for a reset - there is a mandatory fee for this service. See page 39 for more information. If the GT shows Not Installed you can continue with your preparations to install the download to your vehicle. If the GT shows Recovery, contact technical support for further assistance. See page 47 for more information about contacting technical support. 31 INSTALLING THE TUNE Removing Fuses This step is vital for successful installation on some vehicles, but not required on others. The following pages include information about which fuses need to be pulled to allow the GT to install the tune to the engine computer on specific vehicles. If the fuses are not pulled, the tune will most likely freeze during the install process. Fuses can be replaced after the tune installation has been completed. 40415 GT GAS GMC/Chevrolet '99-'02 4.8/5.3/6.0/8.1 Liter Engines Fuse Box Located Inside the Cab: #1 - SEO IGN (Special Eq. Options/Ignition) #16 - SEO ACCY (Special Eq. Options/Accessories) #29 - RD01 (Radio) #30 - RAP2 (Relay Power) Fuse Box Located Under Hood: #60 - TBC (Body Computer) #18 - TBC 2C (Body Computer) #18 - TBC 2C (Body Computer) #20 - TBC ACCY (Body Computer) #23 - TBC 2A (Body Computer) #38 - TBC IGN1 (Body Computer) #38 - TBC IG Parking Assist, Power Liftgate #22 - Driver Information Center (DIC) Chevrolet '11-'13 Cruze #1 - Infotainment System/Hands-free Phone #3 - Body Control Module #4 - Infotainment System #5 - Information Center #18 - Audio #21 - CHEVYSTAR Replace all fuses after the download is complete! 32 INSTALLING THE TUNE 1. Complete the Pre-install steps • Update GT using U Main Menu 4. Choose Install Download 5. Follow the instructions on your GT screen, which will include the following steps: • You will need to turn your key to dierent position, or at any other time when you are installing the tune. • You may be prompted with choices for certain settings like the speed limiter. Many of these are vehicle specic. See page 16 for more information on these settings. • If there is a problem or the GT displays an error message, do not change anything and contact technical support. IMPORTANT NOTE: There are certain times when disconnecting or interrupted, the engine computer can be corrupted. This can cause your vehicle not to start and possibly even require the ECM to be replaced. The illustration below is an example of one of the times during the installation when it is vital that the power is not disconnect the tuner even though the screen tells you not to unplug. 6. The GT will indicate when it is finished & then reboot to the Main Gauge Display • Once the tuner has rebooted to the Main Gauge Display, you can start and use your vehicle like normal. 33 Troubleshooting Installation 1. Make note of the code number and all information displayed on the screen. 2. Disconnect and update your GT. See page pages 18-25 for instructions. 3. Make sure that you have disconnected all aftermarket electronics and completed all of the important preparation steps. See pages 30-32 for more information. 4. Try to install the download again. 5. If the error occurs again, contact technical support. See page 47 for more information about contacting technical support. including the following code numbers: 0, 141, 325 (on a 2011 Duramax), 358, 393 Gets Stuck on "Turn Key to Run" 1. Make sure that the key is turned as far as possible without turning the engine on. 2. Turn the key to the O position, then turn it back to the On position. 3. Jiggle the key. 4. Disconnect the GT. 5. Update if this has not already been done. See pages 18-25 for more information. 6. Reconnect the GT. 7. Make sure that all aftermarket electronics are disconnected from the vehicle. 8. Pull fuses if necessary for your vehicle. 8. Pull fu charged). See page 31 for more information. 10. Try to install the download again. 11. If the error occurs again, contact technical support. 40415 GT GAS GT Freezes in the Middle of the Download. Try installing a battery charger to maintain voltage. (This step can solve many problems, even if your battery is new and fully charged). See page 31 for more information. 34 40415 GT GAS UNINSTALLING RETURNING TO STOCK What does this mean? "Uninstalling the tune" and "returning to stock" are different ways to describe the same thing: writing the original (stock) information to the engine computer so it uses the settings that it used before you installed on a vehicle, which will allow you to install the tune at a later time. The GT will not allow you to install if the tune has already been installed on a vehicle. When to Return to Stock You should return to stock in ALL of the following situations: • EVERY TIME you take your vehicle in for any type of service, lt is a very common practice for the engine computer to be "ashed" (reprogrammed) during all types of service, even routine maintenance. If the tune from the GT still installed when the engine computer is ashed, it can cause problems when you want to use your GT in the future. See page 37 for more information. • If you want to install the GT on a dierent vehicle at a time. If you want to let a friend try the GT. If you have decided to sell the GT to someone else. • If the battery is having problems and could possibly go dead. Make sure to connect a battery charger while returning to stock to prevent any complications that can be caused by interrupting the GT while it is returning your vehicle to stock. See page 31 for more information. • If you need to disconnect the battery for any reason. IMPORTANT NOTE: If you do not return your vehicle to stock, you may have to call in to technical support to have your GT reset. There is a mandatory fee for this service. See pages 39 and 47 for more information about the reset fee and contacting technical support. 35 How to Return to Stock There are two ways to return your vehicle to stock. installing the tune to your vehicle, so you should make the same preparations and take the same precautions. This means choosing a good time and place, making sure the battery is charged, pulling fuses (if necessary), disconnecting aftermarket electronics, etc. See pages 30-32 for more information. IMPORTANT NOTE: There are certain times when disconnecting or interrupting power to the GT can interfere with the engine computer programming process. If the engine write is interrupted, the programming on your engine computer can be corrupted. This can cause your vehicle not to start and possibly even require the ECM to be replaced. during the uninstallation when it is vital that the power is not interrupted and the tuner is not disconnected from the vehicle. 40415 GT GAS Note: There may be times when our technical support team will instruct you to disconnect the tuner even though the screen tells you not to unplug. from the Main Menu. 2. Follow the instructions shown on the GT gives you a message that the tune has been removed, disconnect the GT from your vehicle. 4. Check to make sure that it starts. If not, see the troubleshooting FAQ on page 49. If this option is not listed on the Main Menu, use the option described on the next page. Install Download option from the Main Menu. 2. Follow the instructions shown on the GT screen. 3. Choose "Return to Stock" when the GT gives you the option between "Change Settings" or "Return to Stock". 4. Follow the instructions shown on the GT screen. 5. Check to make sure the tune has been removed from your vehicle. See page 37 for instructions on how to do this. 6. Test your vehicle to make sure that it starts. If not, see the troubleshooting FAQ on page 49. 36 40415 GT GAS UNINSTALLING RETURNING TO STOCK What if I Don't Return to Stock? Here are some common examples: • If you take your vehicle in for service, they will "ash" the engine computer. Even if you ask them not to, any dealer or shop will do this automatically - it is standard procedure for any vehicle they see and they really can't help themselves from following this ingrained habit. What they are doing is actually writing an updated le over any information that is currently saved in your engine computer. This includes the tune from your GT, so basically the tune is no longer installed and you will not be able to use the power level settings or any other options - but the GT doesn't know that, it still thinks that the tune is saved to your engine computer. Unless you go through the uninstall process with your GT, it will still show as installed and will not allow you reload the tune on your vehicle or on any other vehicle. The only way to resolve this problem is to contact technical support and have the GT reset - there is a mandatory fee for this service. See page 39 for more information about the reset and fee. • If you sell or trade-in your vehicle you will not be able to install your GT on another one without calling technical support to have the GT reset. See page 39 for more information about the required fee for the reset service. vehicle rst, they will not be able to use it. You will probably have negative consequences like an upset buyer, having to refund the purchase price or cover the cost of a reset, a negative review, and bad karma. See page 39 for more information about resetting the GT and the mandatory fee. By now, you may have noticed a pattern: if you do not return your vehicle to stock and something happens to your engine computer, you will need to call and pay the fee in order to have the GT reset. Page 39 has more information about the reset process and the required fee. How Do I Know if the GT is (Still) Installed? There are two ways to check if the tune is currently installed. Main Screen 1. Look at the lower right corner of the main display screen. 2. If there is a box that reads "Power level setting not available until download is installed. • If there is anything else in this part of the main screen, the tune is probably installed. • If there is anything else in this part of the main screen 1. Go to the Main Menu. 2. Scroll down. 3. Choose Show Settings, 4. Check to see what the GT shows next to "Download". 5. If it shows: • Installed - the tune has been uninstalled and the vehicle is returned to stock. • Recovery - there is a problem and you should contact technical support. See page 47 for more information. 37 NOTES 40415 GT GAS 38 40415 GT GAS MORE INFORMATION Changing the Power Level The power level tunes on the GT gas are based on the octane of the fuel being run in the vehicle. Unlike the GT diesel, this option cannot be changed on the octane of the fuel being used while you are driving. There are some times when this setting does need to be changed, like when lling the tank with a dierent octane the power level tune setting: 1. Make the same preparations and take the same preparations as when you initially installed the tune. See pages 34-36 for more information. 2. Choose Install Download from the Main Menu. 3. Follow the onscreen instructions. 4. Choose Change Vehicle Settings when you are prompted to choose between that option and "Return to Stock". 5. Continue following the onscreen instructions until the GT indicates that the process is complete. IMPORTANT NOTE: This option actively reprograms the tune on your vehicle's engine computer. There are certain times when disconnecting or interrupted, the programming process. If the engine computer can be corrupted. This can cause your vehicle not to start and possibly even require the ECM to be replaced. The illustration below is an example of one of the times during the installation when it is vital that the power is not disconnected from the vehicle: Reset Fee Why is This Policy in Place? In the past, our technical support department has been ooded with people needing to reset their tuners. Because of this, we were not able to support the other people who needed help. The extra calls were coming for two dierent reasons: 1. Despite our best attempts to educate customers about the importance of uninstalling the tune before selling their vehicle or having it serviced, people did not take seriously the requirement of returning their vehicles and calling in to have the unit reset in between each tune. The tuners are designed to only be installed on one vehicle at a time. Once the policy for the reset fee was created, the number of calls to request tuner resets was signicantly reduced and we were able to improve our support to everybody. The reset process is relatively simple and a technician can help you complete the reset over the phone. See page 47 for more information about contacting technical support. Performance Testing Software This software allows you to download saved Performance Testing data from your GT (see page 12 for more information) to your computer and display the information as a graph for easy analysis. You will be able to get graphs and raw Excel data for: speed, RPM, horsepower, and torgue. You can print drag racing time slips, save and rename tests, and download up to 20 tests from your GT at one time. Visit www.bullydog.com/performance_testing.php to download this free software 39 Windows Update Windows Update Windows Update 40415 GT GAS MORE INFORMATION 4. Windows Update will check to see if you have the current version of the updating software: 40 40415 GT GAS MORE INFORMATION Windows Update (continued) Windows XP 5. If your computer doesn't have the most recent update software, your browser will display a pop-up bar like the one shown below: If your computer doesn't show that message, skip to step 9 6. When the Internet Explorer Security Warning pops up, click Install: 7. Click the Install Now button. 8. Windows Will then automatically download and install the latest Update Software. 41 MORE INFORMATION Windows Will then automatically download and install the latest Update Software. 41 MORE INFORMATION Windows Will then automatically download and install the latest Update Software. 41 MORE INFORMATION Windows Will then automatically download and install the latest Update Software. 41 MORE INFORMATION Windows Will then automatically download and install the latest Update Software. 41 MORE INFORMATION Windows Will then automatically download and install the latest Update Software. 41 MORE INFORMATION Windows Will then automatically download and install the latest Update Software. 41 MORE INFORMATION Windows Will then automatically download and install the latest Update Software. 41 MORE INFORMATION Windows Will then automatically download and install the latest Update Software. 41 MORE INFORMATION Windows Will then automatically download and install the latest Update Software. 41 MORE INFORMATION Windows Will then automatically download and install the latest Update Software. 41 MORE INFORMATION Windows Will then automatically download and install the latest Update Software. 41 MORE INFORMATION Windows Will then automatically download and install the latest Update Software. 41 MORE INFORMATION Windows Will then automatically download and install the latest Update Software. 41 MORE INFORMATION WINDOWS WILl then automatically download and install the latest Update Software. 41 MORE INFORMATION WINDOWS WILl then automatically download and install the latest Update Software. 41 MORE INFORMATION WINDOWS WILl then automatically download and install the latest Update Software. 41 MORE update and have the time to wait for all of the updates to nish downloading and install- ing. Depending on how many updates are required, this could take several hours. It is also likely that you will have to restart your computer in the middle of the process and may even have to run the Express Update more than once before your computer is completely up to date. • Custom: Choose this option if you prefer to manually locate and install the update that your computer needs to be able to install and run the Bully Dog Update Agent. NOTE: Because the Express update is relatively automated and quite time consuming, these instructions will only show you how to update using the Custom

option. Either option will work; however, some of the updates completed during the Express update cannot be uninstalled, so you should be sure before choosing that option. 40415 GT GAS 10. Windows will check your computer for updates: NOTE that this could take several seconds or several minutes Your computer might generate an Internet Explorer pop up message about information and privacy. Click Yes. (You might also want to check the box as shown in the picture to prevent your computer might prompt you to upgrade some components of Windows Update. If you see the screen below, click Download and Install Now, as shown below. If your computer does not display this screen, skip to step 14. 42 40415 GT GAS MORE INFORMATION Windows Update (continued) Windows Update software. When your computer will then download and installing the updates, you will be prompted to restart your computer. You must restart in order to proceed to the next step in the update process. 13. Once your computer has restarted, repeat steps 1,2,3, and 9 (open Windows Update and click Custom). 43 MORE INFORMATION Windows Update and click Custom). Windows Update will display a list of updates that are available. First, scroll down and clear any of the High Priority updates that may alre3ady be selected. 15. Once you have cleared the other updates, click the box to select the Microsoft .NET Framework 3.5 Family Update (KB951847) x86. 44 40415 GT GAS MORE INFORMATION Windows Update (continued) Windows XP 17. Once the .NET Framework 3.5 Service Pack is selected, click on Review and Install Updates. 18. Make sure that the .NET Framework is the only update selected, then click Install Updates. 45 MORE INFORMATION Windows Update (continued) Windows XP 40415 GT GAS 19. Windows will also automatically initialize the installation of the update. This step could take a few minutes and it might seem like your computer is stuck, but this is normal and your computer will continue the process automatically when it is ready. 20. Once the .NET installation is complete, click Restart Now. 21. Once your computer has restarted, the update process is Complete! You can now install and run the Bully Dog Update Agent and update your GT. For more information about updating your GT. For more information about update process is Complete! You can now install and run the Bully Dog Update Agent and update your GT. For more information about updating your GT. For more information about update process is Complete! You can now install and run the Bully Dog Update Agent and update your GT. For more information about update process is Complete! You can now install and run the Bully Dog Update Agent and update your GT. For more information about update your GT. For more information abou can take several minutes to get started. Eventually, your computer will move forward with installing the .NET Framework update. 46 40415 GT GAS CONTACTING TECHNICAL SUPPORT Technical support is (940)783-9915. You should have all of the following items available when contacting technical support: • Your GT tuner • Your computer via a USB Mode. In order to use the Update Agent, keep the GT in USB Mode. If you want to use your computer to power the GT and allow you to access some of the GT's functions when it is not connected to your vehicle, you can Abort USB Mode. In order to Abort USB Mode. In order to Abort USB Mode. In order to Abort USB Mode. temperature to use for the GT temperature warning setting for your vehicle. This will help you prevent heat damage to your engine. How to Calibrate Your Pyrometer 1. Return your truck to stock by uninstalling the tune. See pages 39-41 for more information. 2. Find a steep hill with a long road and a high speed limit. 3. Wait for a hot day. 4. Set up a heavy load on your vehicle. 5. Haul the load to the top of the hill. 6. Check the pyrometer temperature. 7. Add 150°F. 8. Change the temperature warning setting under Main Menu > Vehicle Setup > Set Warning Levels. 40415 GT GAS 48 40415 GT GAS the key - everything else has turned off. Why won't my GT turn off? A. The power switch is in the "wrong" position. If you want the GT to turn on and off along with the rest of your vehicle, you will need to make sure that the power switch is in the "wrong" position. If you want the GT to turn off? A. The power switch is in the "wrong" position. If you want the GT to turn off? A. The power switch is in the "wrong" position. If you want the GT to turn off? A. The power switch is in the "wrong" position. for more information about installing the power cable. My Vehicle Won't Start after I installed the Download Q. My vehicle won't start after I installed the download, what happened and how do I fix this? A. The GT encountered a problem when it was writing to the engine computer. Follow these steps to resolve the problem: 1. Return the vehicle to stock. See page pages 35-37 for more information about this step. 3. Install the download again. Test to see if the engine starts. 4. Contact technical support if the problem persists. See page 47 for more information about contacting technical support. My Vehicle Won't Start after Returning to Stock Q. My vehicle won't start after I uninstalled the tune. How do I fix this? A. Follow these steps to get your truck running with the tune uninstalled: 1. Make sure that you have completed all of the preparation steps on pages 30 . 2. Go to the Main Menu on the GT. 3. Scroll down and choose the Show Settings Option. 4. Check what the GT is showing next to Download. • Recovery: go to the next step. • Installed or Not Installed: Contact technical support. 5. Go back to the Main Menu 6. Choose the Installed or Not Installed: Contact technical support. 5. Go back to the Main Menu 6. Choose the Installed or Not Installed: Contact technical support. 5. Go back to the Main Menu 6. Choose the Installed or Not Installed or Not Installed or Not Installed: Contact technical support. 5. Go back to the Main Menu 6. Choose the Installed or Not Installed: Contact technical support. 5. Go back to the Main Menu 6. Choose the Installed or Not Installed: Contact technical support. 5. Go back to the Main Menu 6. Choose the Installed or Not Installed: Contact technical support. 5. Go back to the Main Menu 6. Choose the Installed or Not Installed: Contact technical support. 5. Go back to the Main Menu 6. Choose the Installed or Not Installed: Contact technical support. 5. Go back to the Main Menu 6. Choose the Installed or Not Installed: Contact technical support. 5. Go back to the Main Menu 6. Choose the Installed: Contact technical support. 5. Go back to the Main Menu 6. Choose the Installed or Not Installed: Contact technical support. 5. Go back to the Main Menu 6. Choose the Installed or Not Installed: Contact technical support. 5. Go back to the Main Menu 6. Choose the Installed or Not Installed or No 8. Follow the onscreen instructions. 9. Once the recovery is complete, try to start your vehicle still will not start, contact technical support - see page 47 for more information about contacting technical support. Note: If the Recovery process completes successfully, your vehicle is returned to stock. You will not need to do another step to uninstall the tune or return the truck to stock. If the Show Setting screen still shows Recovery Mode). 49 My Vehicle isn't Listed under Change Vehicle Q. Why isn't my vehicle included in the list under the Change Vehicle option? A. Chevrolet owners should choose the GMC option that matches the year of their vehicle is very new or very old, you may need to update (see page 18) or your vehicle may not be supported yet. What Can I expect for fuel efficiency improvements? A. See page 2 for information about additional horsepower. Many people do find that the increased horse power helps them get the most mileage out of their fuel as possible. However, since fuel efficiency varies so much between different vehicles and drivers, there is no way to accurately predict fuel mileage increases. To get the best gas mileage possible, make sure to calibrate and use the Driving Coach to improve your driving habits. See pages 12-14 for more information about the Driving Coach. Crazy Larry is no longer available. Due to EPA regulations, it will not be offered again. I Don't Feel Extra Power Q. Why can't I feel the extra horse power? A. A. You may be expecting to feel it he same way as on a diesel; the same way as on a diesel; however the additional horsepower will still help the vehicle accelerate and maintain speed. See page 43 for more information on the different power level tunes that are available for gas vehicles. Also, if your vehicle has recently been serviced, you might have forgotten to return the vehicle to stock. See pages 39-41 for more information on returning to stock. See page 41 for more information on checking to see if your vehicle was returned to stock and what to do if it was not returned to stock. 50 Installing a Bully Dog GT tuner on your diesel vehicle is an excellent way to enhance its performance, improve fuel efficiency, and monitor vital engine parameters. This blog will walk you through the step-by-step process of safely installing the tuner. Let's get started! What Is a Bully Dog GT tuner Diesel? The Bully Dog GT (Gauge Tuner) is a performance enhancing device designed to improve the overall efficiency and output of diesel engines. It interfaces with the vehicle's engine management system to optimize performance metrics such as fuel delivery and ignition timing. Expected Performance: Increased Horsepower: By optimizing the engine's air/fuel ratio and increasing turbo pressure, the tuner can significantly boost horsepower, providing more power for towing and acceleration. Improved Fuel Efficiency: The tuner adjusts the engine's operation for optimal fuel usage, which can result in better mileage, particularly beneficial for long-distance and heavy-duty driving. Tools Needed To install the Bully Dog GT tuner on a diesel engine, you will need the following tools: Screwdrivers: Both flathead and Phillips head. Socket Set: Various sizes to accommodate different bolt heads. Torque Wrench: To ensure all fittings are tightened to specifications. Wire Strippers and Connectors: For any necessary electrical connections. Safety measures to prevent any accidents or damage: Disconnect the Battery: Make sure the vehicle's engine is off and disconnect the battery to avoid any electrical shorts or shocks during installation. Wear Protective Gear: Wear gloves and safety goggles to protect yourself from accidental spills and debris. Ensure a Stable Work Environment: Work on a flat surface and ensure the vehicle is securely parked and cannot move. How To Install Bully Dog GT tuner Diesel? Step by Step Guide Enhancing your vehicle's performance with a Bully Dog GT tuner involves a straightforward installation process. By following these detailed steps, you can optimize your diesel engine for better horsepower and fuel efficiency. Below is a comprehensive guide to properly installing and configuring your Bully Dog GT tuner. Step 1: Mount the tuner where it is easily visible to the driver without obstructing the view of the road. Ideal spots include the dashboard or near the center console. This placement not only ensures easy accessibility but also keeps the device within convenient view for monitoring and adjustment. Secure the device using the provided mounting hardware, such as adhesive pads, suction cups, or screws. Ensure the mount is stable and firmly attached to prevent the tuner from moving while driving, which could lead to distractions or impair the functionality of the device. Step 2: Connect the Wiring Harness Locate the OBD-II port in your vehicle, typically found under the dashboard near the steering column. Connect the tuner is tight and secure to ensure reliable operation and data transmission between the tuner and the vehicle's computer. Carefully route the wires from the tuner to the OBD-II port, securing them with wire ties to avoid contact with moving parts or heat sources. Proper wire management prevents damage and interference with normal vehicle operations, ensuring the installation is both safe and professional. Step 3: Power and Configure the Tuner to a power source according to the manufacturer's guidelines, which may involve wiring it to a fuse box or directly to the battery. This setup ensures the tuner receives the steady power supply necessary for its operation. Turn on the tuner and follow the on-screen prompts to complete the initial setup, which may include configuring the settings according to your preferences. If the tuner indicates that updates are available, connect to Wi-Fi or another internet source to download and install these updates, optimizing your device's performance and capabilities. Step 4: Program the Vehicle's needs and your performance expectations. This could range from increased horsepower for enhanced performance to improved fuel efficiency for economic driving. Follow the tuner's installation process might temporarily affect the vehicle's operation, typically indicated by the vehicle's operation. make any final adjustments required to ensure optimal performance and integration with your vehicle's systems. Common Issues Troubleshooting Encountering issues during or after installing your Bully Dog GT tuner can be frustrating, but many common Issues Troubleshooting Encountering issues during or after installing your Bully Dog GT tuner can be frustrating. challenges that users might face. Follow these steps to resolve issues and get your tuner back to optimal performance.1. Device Not Powering Up IIf the tuner does not power up, first check all connections to ensure they are secure and properly connected. Verify that the tuner is correctly plugged into the OBD-II port and that the power source is active. Additionally, check the vehicle's fuses to ensure none have blown, as a blown fuse can prevent the device from receiving power.2. Error Messages or Exhibit erratic behavior, resetting the device can often resolve these issues. Disconnect it from the power source and OBD-II port, wait a few minutes, and then reconnect everything. If problems persist, updating the tuner's software may be necessary to correct any software glitches or computer is up to date, as outdated software can lead to compatibility issues. Double-check that the harness connection to the OBD-II port is secure. If the problem continues, consulting the manufacturer's support for guidance tailored to your specific vehicle model and tuner version may be required. Maintenance and Updates Regular maintenance of your tuner includes keeping it clean and checking for physical wear. Ensure that the device and its connections remain dust-free and the mounting area is intact to prevent any loosening or vibration. Regularly check for software updates to maintain optimal performance and feature access. latest vehicle models and specifications. Conclusions In conclusion, taking the time to properly install and maintain your Bully Dog GT tuner not only ensures optimal performance but also enhances your overall driving experience. With the right approach, you can maximize your vehicle's efficiency and power, proving that smart technology paired with diligent care can lead to substantial long-term benefits for any diesel engine enthusiast.